


# ORBIT FAN

## ASSEMBLING INSTRUCTIONS

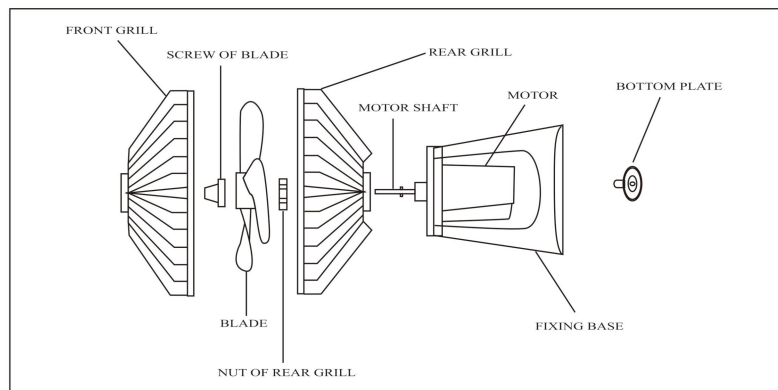

### SAFETY STATEMENT:

- 1.This orbit fan works under rated voltage only.
- 2.Do not put the power cord into the socket when installation.
- 3.Do not put finger or any other object into the grill when using.
- 4.Please cut the power off when move the fan.
- 5.Please cut the power off when clean the fan.

### OVER-HEATING-PROTECT STATEMENT:

To avoid any danger, the thermal fuse have been set in this fan, and it will cut the power off automatically,when the temperature arised by any other abnormal factors.

### ASSEMBLAGE:

#### 1.REAR GRILL

Turn down the nut of rear grill from the motor body, then assemble the rear grill on the motor body, tighten the nut by clockwise.

#### 2.BLADE

First loosen the screw of the blade, take the blade put into the motor shaft, then tighten the screw by screw driver.

#### 3.UPPER FRONT GRILL

Put the part of logo in the right position, then close the front grill and the rear grill together, finally fasten the clips accordingly.

### INSTALLATION:

The fan should be set on the position with at least 2.3meters distance from the lowest surface of the fan to the floor.  
Fixed the bottom plate on the ceiling with screws, then put the fan on to it with the connection of fixing base and bottom plate.  
Finally fasten the relevant screw.

### USAGE:

#### 1.Regulator

Three speeds, with the position of 0 ,the lowest of 1,the medium of 2 and the top of 3.

#### 2.Workiing area

the fan can work with the area of 360-degree-covering.you can just push the adjusting knob to the right position then fix the pin to choose the suitable working area.

3.BE NOTED THERE ARE JUST TWO POSITIONS FOR ADJUSTING.

### THE CIRCUIT DIAGRAM OF FAN

