



# WALL FAN

## OPERATING INSTRUCTIONS

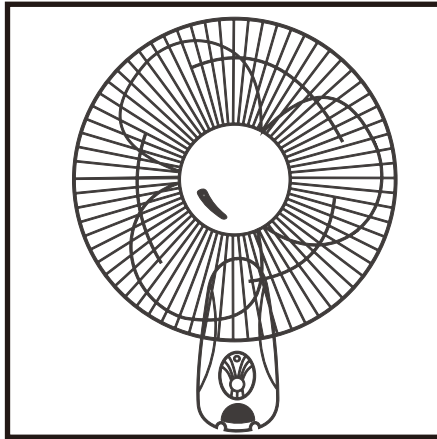

Please read this instruction manual before operating and  
Keep safe for future reference

### (1)PARTS IDENTIFICATION

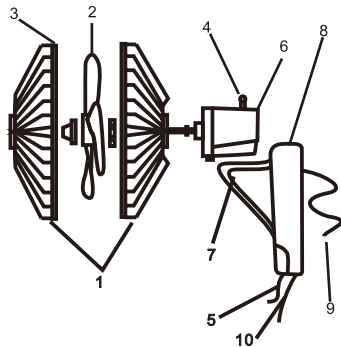

1	Guard
2	Blade
3	Guard clip
4	Oscillate knob
5	Clutch handle
6	Motor
7	Knee joint
8	Control Box
9	Cord
10	Switch

### (2)HOW TO ASSEMBLE

- Turn the guard nut counterclockwise and remove it.
- Place the rear guard in the proper position. Fit the projections into the guide holes of the guard.
- Turn the nut clockwise and tighten it completely.
- Pull out tube of the shaft.
- Tighten the screw to fasten the blade.
- Attach the front guard

### (3)OPERATION

The speed of the fan can be controlled by a digital indicating device. Pull the string, the fan will start with "1" displayed. Further pulling the string, the fan will speed up with the digital displaying "2" or "3" respectively, when the device displays "0" again, the fan stops. To change the direction of the air flow, push the edge of the guard to the desired position. The fan will start oscillating push the handle.

### (4)PAY PARTICULAR ATTENTION TO THE FOLLOWING:

1. Use only with rated Voltage.
2. Do not use acids, chemicals oils, etc have been used

### (5)GUIDE TO BETTER MAINTENANCE

1. Keep dry Never be of excessive humidity and water.
2. Keep the fan clean. Wipe away dirt with a clean soft cloth, ordinary soap and water. Wipe dry.  
Do not use solvents...ect(gasoline or petroleum ).

#### WARNING:

1. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
2. To reduce the risk of fire or electric shock do not use this fan with any solid-state speed control device.
3. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
4. Ensure that the fan is switched off from the supply mains before removing the guard.